



AUTO-MOW CATALOGUE



# AM PRO TRACKER PLUS

## USER MANUAL




 Robot  
Installation

## Setup for Robot Mower Boundary Cable

1. Detach the wire from the docking station
2. Attach the red cable from the transmitter to the boundary cable.
3. Push the Earth Rod into the ground and connect with the black cable from the transmitter.

### Alternative: use two transmitters at the same time.


Connect the second transmitter to the boundary wire going in the opposite direction, connect it to the ground with the earth rod, and set it up on another frequency. Now you can follow each wire by using the single receiver and locate the cable break quicker.

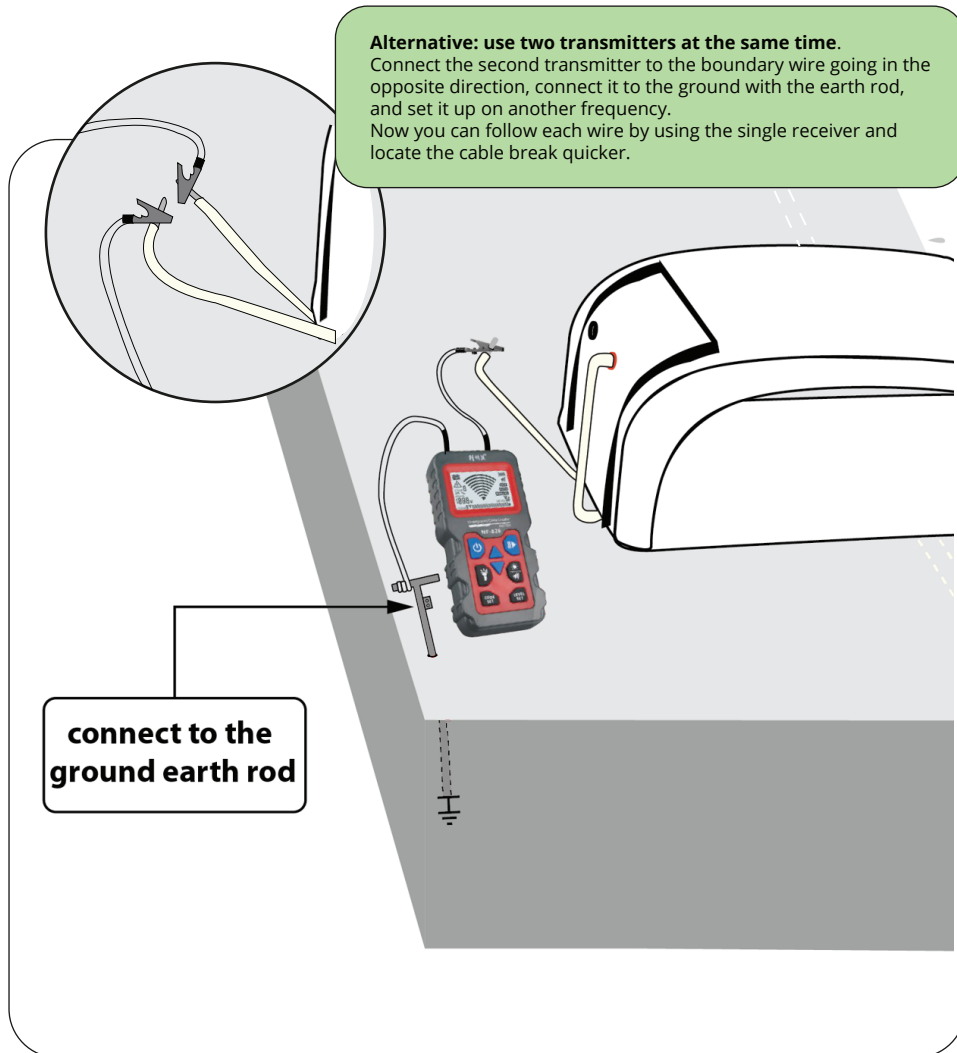

## Fault finding - Robot Mower Boundary Cable

The display shows you where the cable is, and you follow the sound and the signal graphic on the display of the receiver to locate the break.

1. Walk along the boundary cable until the signal or sound start to lower.
2. Go closer to the ground to detect where precisely the break is.
3. Dig up the cable, and you will see the break is visible with 10-15 cm.

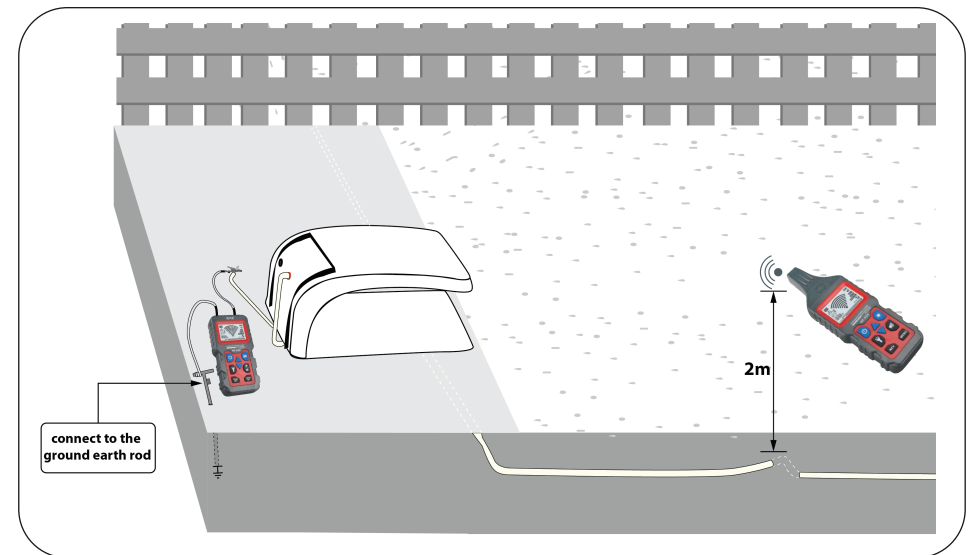

**AA Robot Installation**

Professional tools for the best Repair or Installation.